

### WESTRIM SIGN SWITCH

MECHANICAL POWER SWITCH

## PUTTING POWER AT YOUR FINGERTIP

SIGNAGE | CABINETS | CANS



E469421 **US** E209062

SMALLER SIZE FOR EASIER INSTALL

20 AMP / 2HP @ 120-277 VAC

UL 61058-1 (SWITCH) & UL 879 (SIGN ACCESSORIES)

12" LEAD WIRES (14 AWG, 600V, 105°C)

20 AMP / 2HP @ 120-277 VAC

**ON / OFF FACEPLATE** 

FITS 1/2" PANEL OPENING

**INTERNAL TOGGLE SEAL** 

SILICONE BOOT



#### NOTE\* PER UL48, 20 AMP VAC RATED SWITCHES ARE LIMITED TO A TOTAL TRANSFORMER LOAD OF 10 AMPS.

CATALOG #SWSLP

DESCRIPTION	FRANCE PART #	WESTRIM CATALOG #	PACKAGING
SIGN SWITCH W/BOOT, 20 AMP (25)	38057-01	SW20A2HP	25 PER BOX / 20 BOXES PER CASE

#### ASK YOUR DISTRIBUTOR OR OUR REPRESENTATIVE FOR MORE INFORMATION



SFEG.com/FRANCE 2268 Fairview Blvd. Fairview, TN 37062 sales@francelighting.com 800.793.4793



**U.S. & CANADA REPRESENTATIVES** 

SCOTT CUTCHER Central & Eastern U. S. | Eastern Canada

**CALVIN ROLLYSON** Western U. S. | Western Canada


EMAIL: SALES@KORVISUALGROUP.COM | PHONE: (615)-900-0966



# INSTALLATION & SPECIFICATIONS

#### INSTALLATION INSTRUCTIONS

- 1. Drill or punch 1/2" hole through mounting surface. De-burr.
- 2. Remove one nut and "on / off" plate, leaving one nut and lock-washer on switch.
- 3. With switch in mounting hole, check that barrel extends 3 to 4 threads beyond face of mounting surface.
- 4. Adjust nut still on switch to obtain this distance.
- 5. Place switch in mounting hole.
- 6. Use a wrench to hold rear nut while tightening the nut on the front.
- 7. For dry locations, slide "on / off" plate over barrel, followed by nut, and tighten.
- 8. For wet / damp locations, slip boot over toggle and tighten to mounting surface.
- 9. For "on / off" indication when using boot, use decals provided.

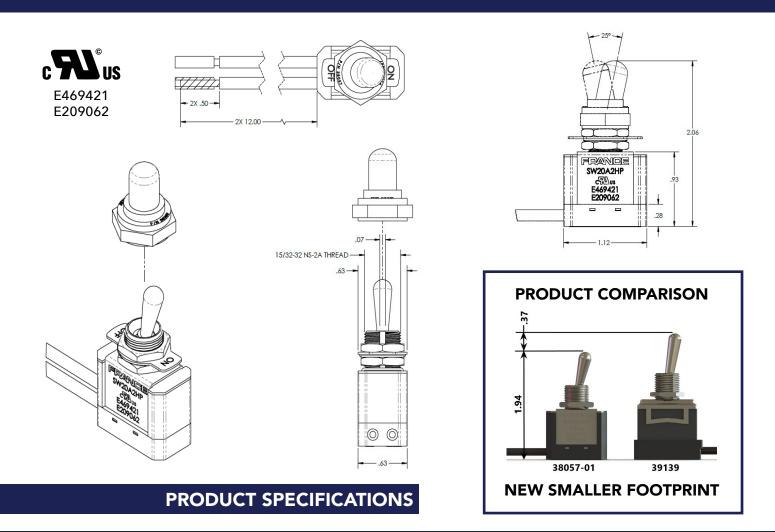

#### Contact SFEG Customer Service at 800.793.4793 2268 Fairview Blvd., Fairview, TN 37062